



# INSTALLATION GUIDE

## **BBT037/ BBC037/ BBCD037**

TOYOTA FJ CRUISER



- Ironman 4x4 BBT/ BBC/ BBCD037 Bull Bars fit to a Toyota FJ Cruiser.
- It will take about 3 hours to install.

**NOTE:** This product has been tested for air bag compatibility and therefore the mounting system **MUST NOT** be modified

**IMPORTANT:** Bull Bar installations should only be done by a qualified person and it is the responsibility of this person to ensure correct fitment.

1. Before installation check bull bar application is compatible with your vehicle.

2. Remove front bumper bar, grill and bumper bar reinforcement.


3. Remove cooler pipe support bracket from right hand chassis rail and discard.



4 Remount cooler as shown.



BEFORE

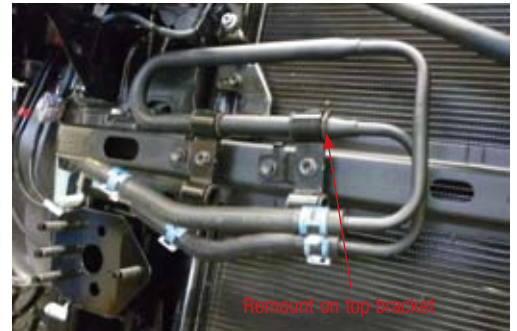

AFTER

5. Remove A/C pipe bracket and modify as shown.



- 5b. Cut bracket 60mm from mounting end  
Drill a 6mm hole 40mm from mounting end  
in centre of bracket.



6. Rust proof and refit bracket and pipe as shown.



7. Place U-Bolts in position around chassis from  
inside out, in front of radiator.



8. Fit chassis bracket to chassis and secure loosely  
in place using factory nuts.

9. Place reinforcing brackets over U Bolts outside  
chassis and loosely fit M10 nuts, springs and flat  
washers.

Fit M12 bolt, spring and flat washer to captive  
nut in chassis.

Place heavy duty flat washers between  
reinforcing bracket and mounting cradle and  
secure with M12 hardware provided, factory nuts  
and strengthening plates. Tighten all nuts and  
bolts.



10. If winch is being installed, refer to winch  
installation instructions Pages 5 - 9.



11. Unwrap bull bar. Check over riders and light assemblies are tight in bull bar before installation.

12. Fit bull bar to chassis brackets using M12 bolts, flat washers, spring washers and nuts provided. Align bull bar with vehicle and tighten.

13. Once bull bar is aligned with vehicle and tightened, drill through pinning holes (circled in red) between bull bar and chassis bracket and secure with bolts, washers and nuts provided.



14. Connect park lights, indicators and fog lights as per wiring diagrams on page 9 of Instruction Guide.

15. Fit protection plate underneath the bull bar using M8 bolts, spring washers and flat washers provided.

NOTE: The Underbody protection plate shown to the right is to be purchased separately to the bullbar



16. Attach right hand mud guard liner as shown and attach to washer bottle with cable tie.



Attach left hand mud guard liner and secure with cable tie.



# Winch Installation

**IMPORTANT:** Before winch is installed to winch cradle, the clutch handle will need to be rotated to a more convenient position for access through bull bar.

1. Stand winch vertically on motor with gearbox facing upwards.



2. Undo and remove 2 chrome Allen head bolts which hold the gearbox to the tie rods.



3. Lift gearbox off winch.



**NOTE:** If shaft comes out of cable drum remove it from the gearbox and place it back into the drum making sure it engages with the brake.



NOTE: Also make sure that the drum support bush remains in the end of the drum support housing with the locating tang in the correct position.



4. Undo and remove 10 Allen head bolts that hold the gearbox housing to the drum support housing and rotate the drum support housing to the desired location.

For most Ironman 4X4 bull bars the gearbox will need to be rotated 2 holes in an anti clockwise direction. Make sure the gearbox gasket does not tear.




5. Re-install 10 bolts and tighten firmly.  
NOTE: Take care not to over-tighten.



6. Refit gearbox to winch, refit and tighten Allen head bolts into tie rods.



7. Bolt winch to cradle with gearbox to the left hand side of vehicle and cable spooling from bottom of the cable drum using bolts and washers provided.

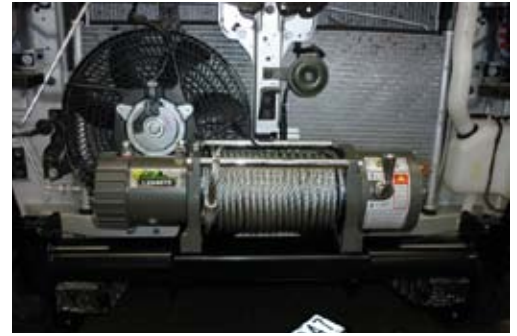

8. Bolt roller fairlead to recess in front of bull bar using bolts, washers and nuts provided.



9. Fit bull bar to vehicle referring to steps 11 - 15 of bull bar fitting instructions.

10. If winch control box is being fitted to top of bull bar remove control box bracket from control box.

11. Place control box on top of centre pan of bull bar with socket for hand controller facing outwards from vehicle. Mark position of the four mounting bolts.

Drill four holes to 6.5mm. Rust proof and de burr and attach control box to bar.



12. Connect three colour coded cables to the corresponding poles on winch motor.





13. Connect the thin black earth wire and negative battery cable to the earth connection on the opposite side of winch motor.



14. Run the positive and negative battery cables into the engine bay taking care to secure cables away from any sharp or moving objects.

Connect negative battery cable to the main battery.

15. Find a convenient location close to main battery to mount battery isolation switch.

Connect positive battery cable to one side of isolation switch and connect other side to the positive battery terminal of main battery.




16. Once completed, refer back to step 14 of bull bar fitting instructions.



# Wiring Diagrams

## PARK LIGHT & INDICATOR

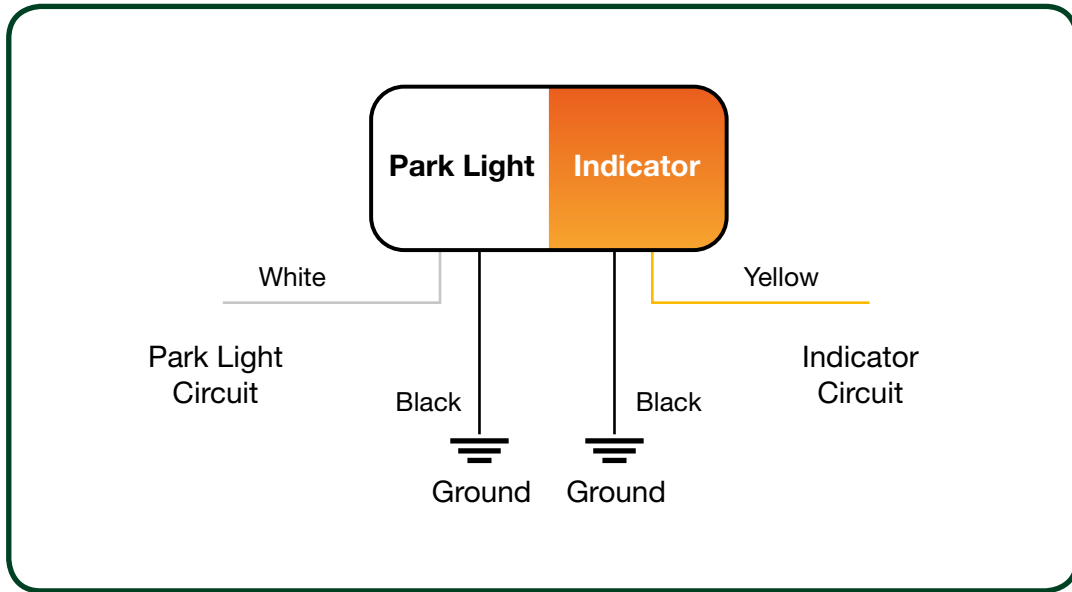

## FOG LIGHTS

