

Fitting Instructions



SKU

TXR817

PRODUCT

**TAG Heavy Duty Towbar
for Suzuki Jimny – (2019)**

SPECIFICATIONS

- Towbar Class: CL 7 Extreme Recovery
- Towing Capacity: 1300kg
- Tow ball Weight: 130kg
- Recovery Point WLL: 2000kg
- Approx. Fitment Time: 90 Minutes



Scan for latest
version of these
instructions


TOOLS REQUIRED

- Spanners
- Sockets
- Air Saw or similar.
- Trim Removal Tool
- Torque Wrench

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Towbar Assembly

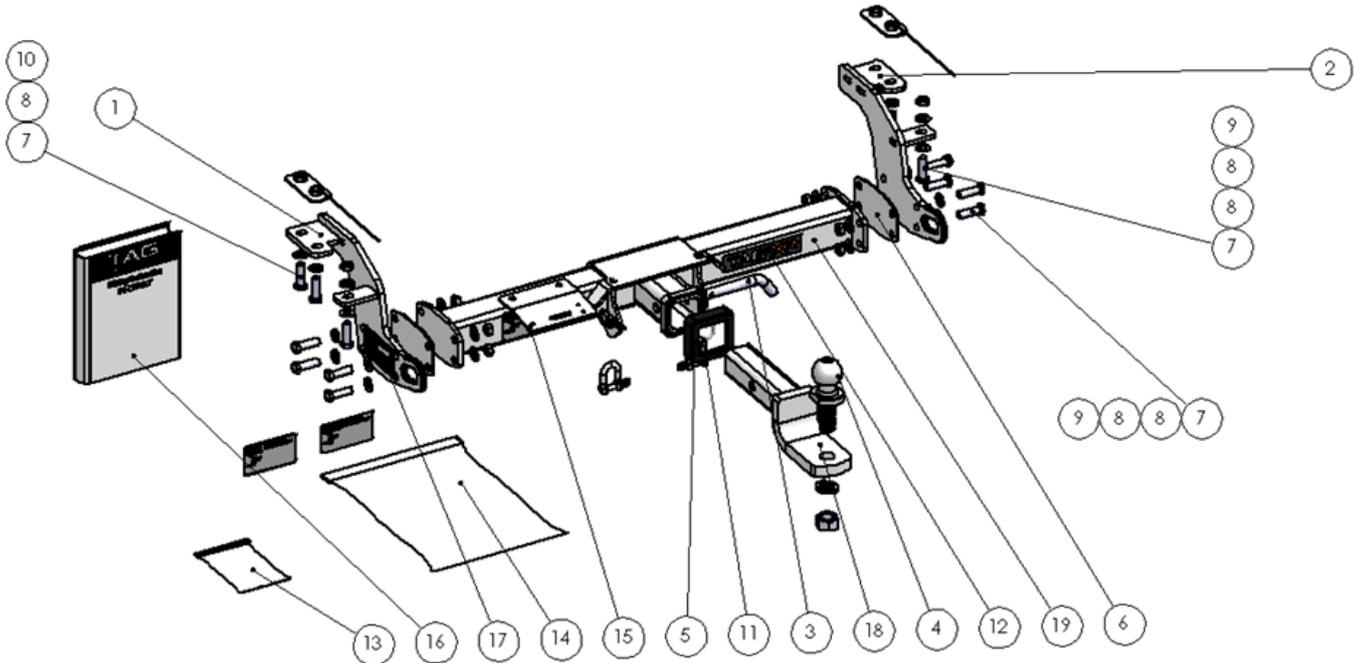

ITEM NO.	DESCRIPTION	QTY.	ITEM NO.	DESCRIPTION	QTY.
1	End Plate subassembly PS TXR817	1	11	TAG D-Shackle - 10mm	2
2	End Plate Sub Assembly DS TXR817	1	12	TAG XR Sticker 150 x 33mm	1
3	Class 4 Pin & Clip	1	13	Poly Bag Resealable 150 x 100mm	1
4	TAG Tow Ball Zinc Plated	1	14	Poly Bag 260 x 375mm	1
5	TGA Hitch Cover	1	15	TAG Compliance plate	3
6	End Cap spacer TXR817	2	16	Fitting Instruction	1
7	M12 x 1.25 x 40 Bolt	14	17	Tag WLL Sticker	1
8	M12 Flat Washer Zinc Clear	24	18	L4180 Ball Mount	1
9	M12 x 1.25 Nut	10	19	Towbar Centre Section TXR817	1
10	Plate with M12 Nuts & 250mm wire	2			

Important Information



Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded, or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present.
- All load ratings shown are under the assumption your trailer has a functional braking system installed.
- When installed in positions other than the one depicted in these instructions the Tow Ball Mount may interfere or obstruct certain features of your vehicle (tailgate opening, Chassis clearance, etc.)

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar. (Tray, Canopy, Suspension etc.)
- After drilling, blow any filings clear, remove any burrs and treat exposed metal with a rust inhibitor.
- The high tensile fasteners supplied with this product are an integral feature to achieving the specified rating, if replacement is required ensure that fasteners of the same grade (8.8) & quality are used. Contact an authorised TAG distributor or the TAG fitment center - (07) 3208 3022 - if further information is required.

Towbar Maintenance and Care:

It is recommended, when not in use, the Tow Ball Mount assembly and class 4 Pin and Clip is stored inside the car away from moisture to prevent standing water from forming rust. Inspect to ensure, on regular basis, fasteners are torqued to the specifications below and in good condition.

Ensure that the fitting instructions are read and understood prior to fitment
Place these instructions in the vehicle's glovebox after installation is completed.

<i>Metric Bolt Torque Settings</i>										
Diameter	Pitch	Grade	Torque	Unit	Diameter	Pitch	Grade	Torque	Unit	
M8	1.25	8.8	29	Nm	M12	1.50	8.8	97	Nm	
M10	1.25	8.8	57	Nm	M12	1.75	8.8	77	Nm	
M10	1.50	8.8	44	Nm	M14	2.00	8.8	122	Nm	
M12	1.25	8.8	101	Nm	M16	2.00	8.8	190	Nm	

Installation Instructions



Step 1: Remove Rear Bumper

- Remove 2x Bolts Securing the bottom edge of the bumper.
- Remove 1x bolt from each wheel arch.
- Open the tailgate and remove 4x bolts and 2x plastic scrivets from the top edge of the bumper.
- Carefully pull away from vehicle ensuring to
- disconnect any wiring attached to the bumper.
- Set aside for trimming and refit.



Step 2: Fit Towbar

- Lift the endplates up to the bottom of each rail. Loosely secure the rearmost lower tab to the bottom of the chassis rail with 1x M12x 1.25x 40 bolts washers & nuts. Repeat on opposite side.
- Insert nut plates on wire into the ends of each chassis rail and align with holes in the chassis and the holes of the endplate upper tab.
- Loosely secure with M12x 1.25x 40 bolts with washers.
- Lift Main bar up to the endplates and loosely secure with the remaining M12x 1.25x 40 bolts, washers & nuts.

Note: If there is more than approx. 3mm clearance between the parts on each side, spacers will be required.



Step 3: Cut Bumper

Note: The towbar installer is ultimately responsible for the location & quality of the bumper cut. To avoid mistakes, please use the following measurements as a guide only. We suggest making small incremental cuts and regularly test fit the bumper to ensure an accurate and tidy appearance. The additional application of rubber pinch-weld around the cut edge ensures a neat & tidy look.

- a. The bumper does not require a hitch box cut out but 2x small notches are required on the bottom edge of the bumper.
- b. Locate the square hole on the bottom edge of the bumper. Measure and mark 270mm & 300mm outward. Also measure 20mm in from the edge of the bumper.
- c. Cut the bumper using an air saw or similar cutting device ensuring to deburr the cut edges.



Step 4: Apply Compliance Label

Apply one of the compliance labels to the pillar of the driver's door. Leave the remaining label and the fitting instructions in the vehicle handbook.



TAG Warranty Statement



SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au.